


SMARTRACING™

PRODUCTS

*A Company Developing Smart Racing
Products Through Engineering*

WEVO Anti-Roll Bar Mount
Part No. 533015

Instructions WEVO Rear Anti-Roll Bar Mount

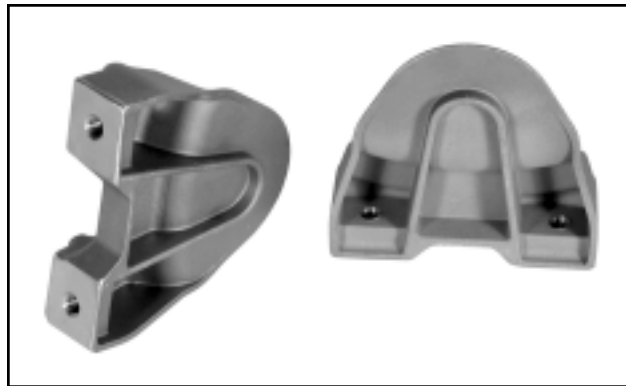

- 1) Important: To prevent a fire, be sure to clamp off fuel lines at the tank and remove all fuel lines around the working area.
- 2) Remove the old mounts with a 3" x 1/16" abrasive wheel. Try to remove only the mount and minimize cutting the chassis.



Questions or comments please call 408.369.9997 or FAX 408.369.9741
www.smartracingproducts.com

533015.ILL.Rev 2

SMARTRACING™

PRODUCTS

*A Company Developing Smart Racing
Products Through Engineering*



- 3) Use the anti-roll bar and roll bar mounts as a fixture to locate the positions of the new weld on mounts. Bolt the new mounts to the Anti-roll bar mounts, slide the Anti-roll bar through the Anti-roll bar mounts, and clamp the weld on mounts to the chassis in the proper position.



- 4) Check the alignment of the roll bar before tack welding the mounts. Once the mounts are welded it will be very hard to align the roll bar between the two mounts.



- 5) Finish welding, check alignment, and paint.

Note:

- 1) If you need to bend the mount you can use the Anti-roll bar as a pry bar.
- 2) Some cars may need a 1/4 inch spacer between the anti-roll bar mount and the WEVO mount to clear the engine mount.